
BRADFORD SERIES



MEASURING INSTRUCTIONS

How to measure your door:

 Stand and face door opening and determine the hinge side(left or right).
Measure the opening between the casing (brick mould) at top, middle and the bottom to determine the width.
Measure the opening between the casing (brick mould) and the sill on both left and right side to determine the height.

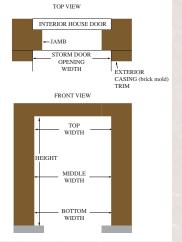

Always - take the smallest measurement

- check the handle height, Bradford doors are predrilled at 40" from the bottom
- check brick moulds face and depth (1-1/4" wide x 1-1/8" deep required)

Never Measure

C

Lilly

- old door

- interior door

- in between existing z-bar EXAMPLES OF SIZES TO ORDER

SIZE	WIDTH	HEIGHT
30″ X 78″	29 3/4" to 30 1/2"	77 3/4 to 78 1/2
32″ X 80″	31 3/4" to 32 1/2"	79 3/4 to 80 1/2
33″ X 81″	32 3/4" to 33 1/2"	80 3/4 to 81 1/2
34″ X 82″	33 3/4" to 34 1/2"	81 3/4 to 82 1/2
36" X 84"	35 3/4" to 36 1/2"	83 3/4 to 84 1/2

GENTEK BUILDING PRODU

Visit us at: www.gentek.ca



GENTEK BUILDING PRODUCTS LIMITED



BRADFORD SERIES STORM DOORS

ALSO AVAILABLE:

Lotus

• Exit bar • Insulated kick plate

Rose

- French conversion kits
- Inswing doors



